


HOW TO FRAME YOUR GRADUATION CORD

Installation Instructions

WHAT YOU'LL NEED

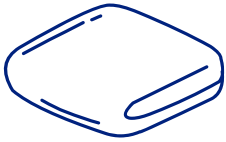

Towel



Tape



Butter Knife



Your Cord



1



Lay your shadow box facedown on a clean towel. Carefully bend back each black flexible tab using a butter knife. Remove the black backing board.

2



Next, remove both mat boards: one with a V-shaped slot and the other with a single rectangular slot. Set aside the mat with the V-shaped slot.

3



Locate the black plastic cord holder with three pegs. Set the cord holder inside the rectangular slot and gently pop it into place so that it's flush with the mat.

4



Turn over the single-slot mat board. Use transparent tape to secure the back of the black plastic cord holder to the white side of the mat board.

5



Fold your graduation cord in half. Next, loop the cords into a knot, allowing 11 inches from the bottom of knot to the tips of the cords tassels.

6



Slip the cord knot onto the first peg of the cord holder. Weave the remainder of the cord over and under the pegs until you're pleased with the arrangement.

7



Place cord display, mat board, and then backing board into shadow box. Gently push down tabs to secure in place.

8



Now your cord frame is ready to hang!

